





TILTING CHASSIS



Made in France

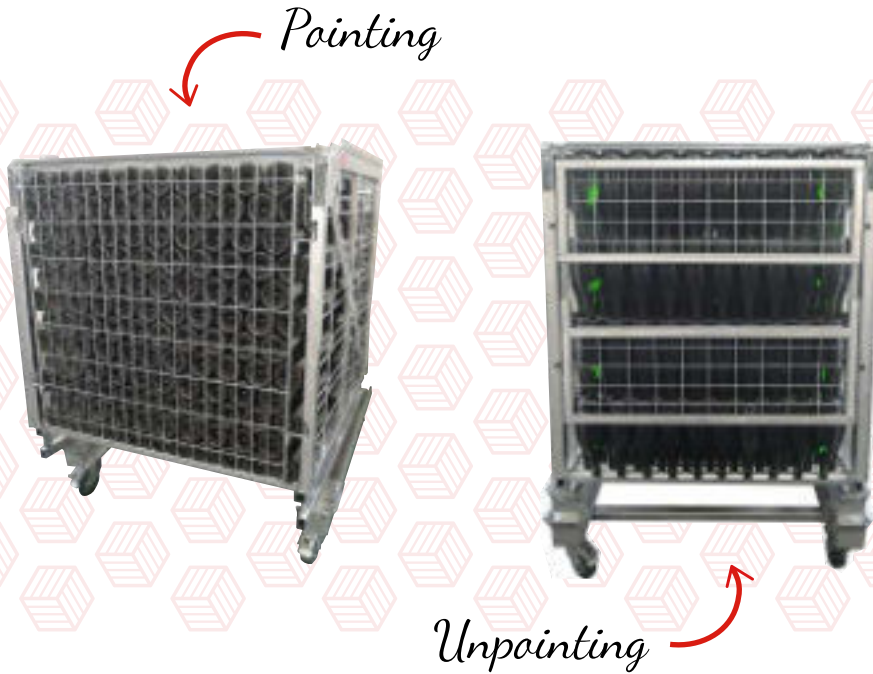

Benefits



Tilting of the crate to **point** and **unpoint** your bottles.



Available on **wheels**



Compatible with standard, V2 and light bottle **riddling box**, bolted riddling box, and light bottle **TSR**®.

Features

Removable

Pointing at transfer, unpointing at disgorging : place or remove the shoes to modify the use of the cart.

Safety

Safely point and unpoint your bottles with the crate tilted backwards. Remove only the top half of the gate to take out the bottles.

Easy to use

Manual handling of the cart to put or remove the shoes in order to point and unpoint the bottles.

Use

Pointing in 3 steps

- 1 Apply the brakes on the cart.
- 2 Position the crate.
- 3 Point your bottles.

Unpointing in 5 steps

- 1 Apply the brakes on the cart.
- 2 Place the shoes in the appropriate places.
- 3 Position the crate.
- 4 Remove the top-half of the gate.
- 5 Unpoint the bottles.