




Single & mixed attachments


Single attachment

Attachment by hooks only : the hooks attach to the TSR® container by the bars on the housing. The spring mounted on oscillating holder keeps the bottles in place during handling.

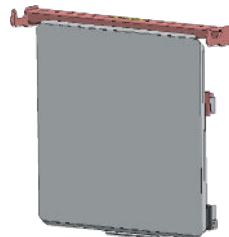


Mixed attachment

Attachment by hooks or forks : quick and easy transformation. The forks can be retracted behind the holder.

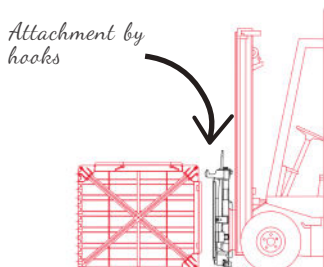

Forks up : single attachment by hooks for use with containers.

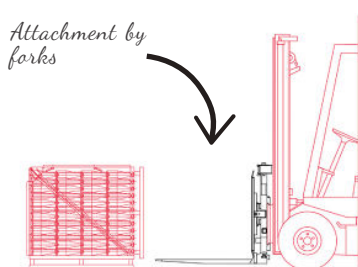

Forks down : traditional handling by forks for use with crates.



Transformation from hooks to forks.

Installation

The attachment is fitted to the equipment holder manually, without the use of tools, on the ground and without the use of additional handling equipment. This is a 2-person operation, if necessary a pallet truck with a pallet can be used.

- 1 Retract the stop bolt.
- 2 Slide the unit laterally onto the equipment holder.
- 3 Center the attachment on the equipment holder.
- 4 Release the stop bolt.

For further details, please refer to the information provided with the product.

